

4-Way Digital Optical Selector

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack 4-Way Digital Optical Selector lets you connect up to four optical home or portable audio components such as a digital receiver, MD (MiniDisc) player, CD/DVD player, or satellite receiver to your home theater system (via a stereo receiver) with a digital optical input. The selector allows you to switch from one component to another just by turning the selector knob — no more disconnecting and connecting cables or moving equipment around. You can play any of the four components you connect and enjoy the output through your home theater system.

 
The selector's features include:

Toslink Jacks — let you connect Toslink digital optical cable to provide interference and distortion free signal transmission.

Four Optical Inputs, each with 1 Toslink jack — let you connect up to four audio/video sources to the optical selector.

CONNECTIONS

Connect your audio sources' (such as satellite receiver, CD/DVD player, or portable MiniDisc player) digital optical output to the selector's **A, B, C, D** input jacks using fiber optical cable with a Toslink connector at each end (available at your local RadioShack store).

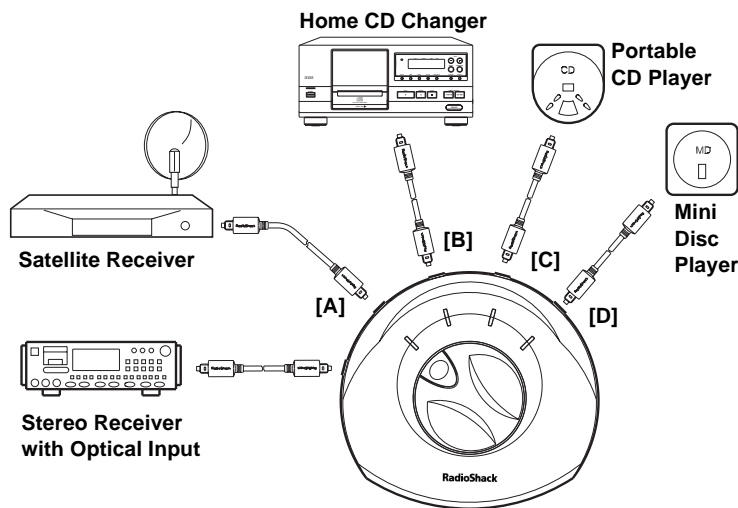


Note: If your audio source's output jack is a 1/8-inch (3.5 mm) mini optical jack, use a Toslink to 1/8-inch (3.5 mm) optical plug adapter (available at your local RadioShack store).

Connect the selector's output jack to your home theater system's stereo receiver's input jack using a fiber optical cable.

OPERATION

 To watch and hear your connected sources through your home theater system, turn on your home theater system and the audio source you want to hear. Then, press in the lock release button on the selector's dial and rotate the dial to the indicator corresponding with the source you want (**A, B, C, or D**). The indicator you select appears green. Release the button to lock the selector in place.

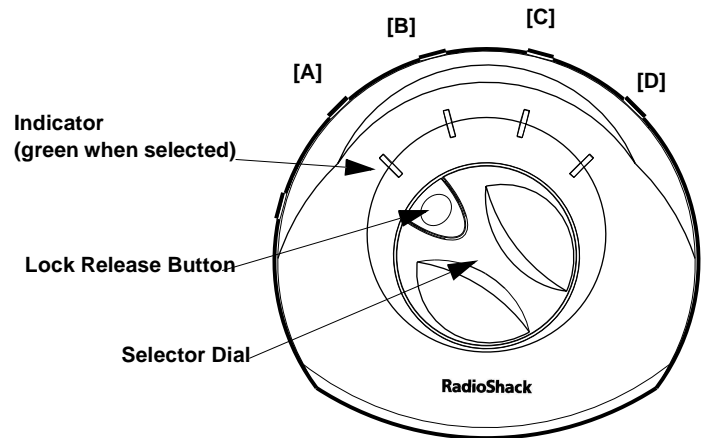

The sound from the selected source comes through your home entertainment system's speakers.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

4-Way Digital Optical Selector

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack 4-Way Digital Optical Selector lets you connect up to four optical home or portable audio components such as a digital receiver, MD (MiniDisc) player, CD/DVD player, or satellite receiver to your home theater system (via a stereo receiver) with a digital optical input. The selector allows you to switch from one component to another just by turning the selector knob — no more disconnecting and connecting cables or moving equipment around. You can play any of the four components you connect and enjoy the output through your home theater system.

 
The selector's features include:

Toslink Jacks — let you connect Toslink digital optical cable to provide interference and distortion free signal transmission.

Four Optical Inputs, each with 1 Toslink jack — let you connect up to four audio/video sources to the optical selector.

CONNECTIONS

Connect your audio sources' (such as satellite receiver, CD/DVD player, or portable MiniDisc player) digital optical output to the selector's **A, B, C, D** input jacks using fiber optical cable with a Toslink connector at each end (available at your local RadioShack store).

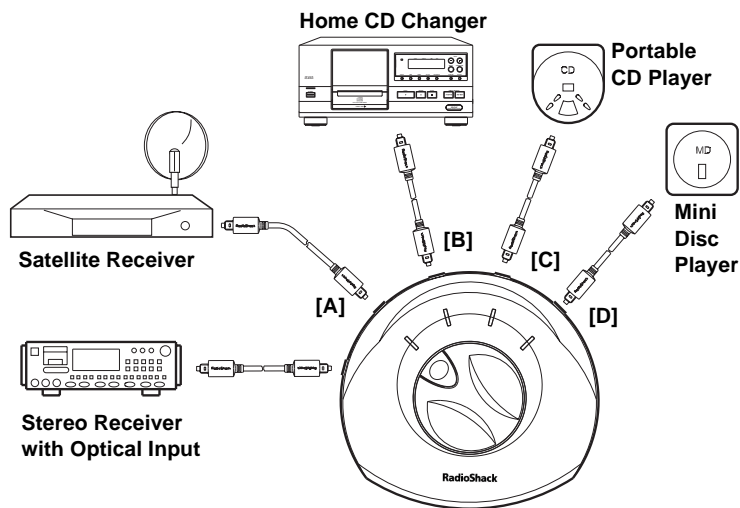


Note: If your audio source's output jack is a 1/8-inch (3.5 mm) mini optical jack, use a Toslink to 1/8-inch (3.5 mm) optical plug adapter (available at your local RadioShack store).

Connect the selector's output jack to your home theater system's stereo receiver's input jack using a fiber optical cable.

OPERATION

 To watch and hear your connected sources through your home theater system, turn on your home theater system and the audio source you want to hear. Then, press in the lock release button on the selector's dial and rotate the dial to the indicator corresponding with the source you want (**A, B, C, or D**). The indicator you select appears green. Release the button to lock the selector in place.

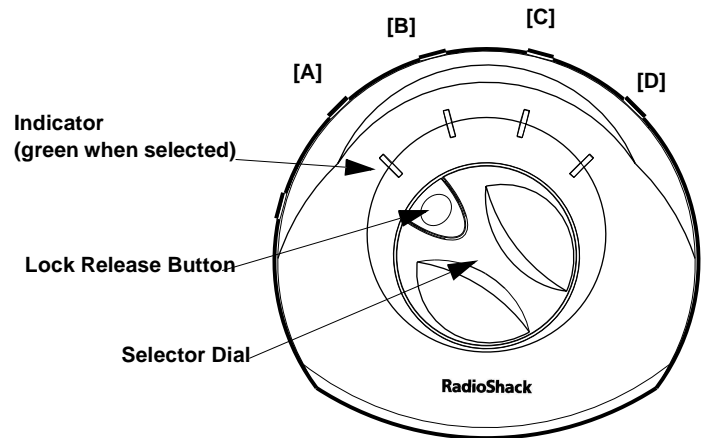

The sound from the selected source comes through your home entertainment system's speakers.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99